


INSTRUCTION SHEET

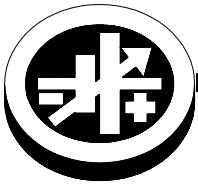

KEPCO An ISO 9001 Company.


**MA
FAW/RTW
50H**

MOUNTING ADAPTER FAW/RTW 50H

DESCRIPTION. The Model MA FAW/RTW 50H Mounting Adapter includes an adapter plate and mounting screws that allow a 50W RTW power supply to be easily substituted for a horizontally-mounted 50W FAW power supply. Mount the adapter plate to the RTW power supply using the screws provided (see Figure 1), then install the adapter plate in place of the FAW power supply using the screws that previously secured the FAW power supply.

NOTES:

1. MOUNT ADAPTER PLATE TO RTW POWER SUPPLY AT HOLES "A" USING TWO SCREWS PROVIDED.
2. INSTALL ADAPTER PLATE WITH RTW ATTACHED USING HARDWARE PREVIOUSLY USED TO MOUNT FAW POWER SUPPLY (NOT SUPPLIED).

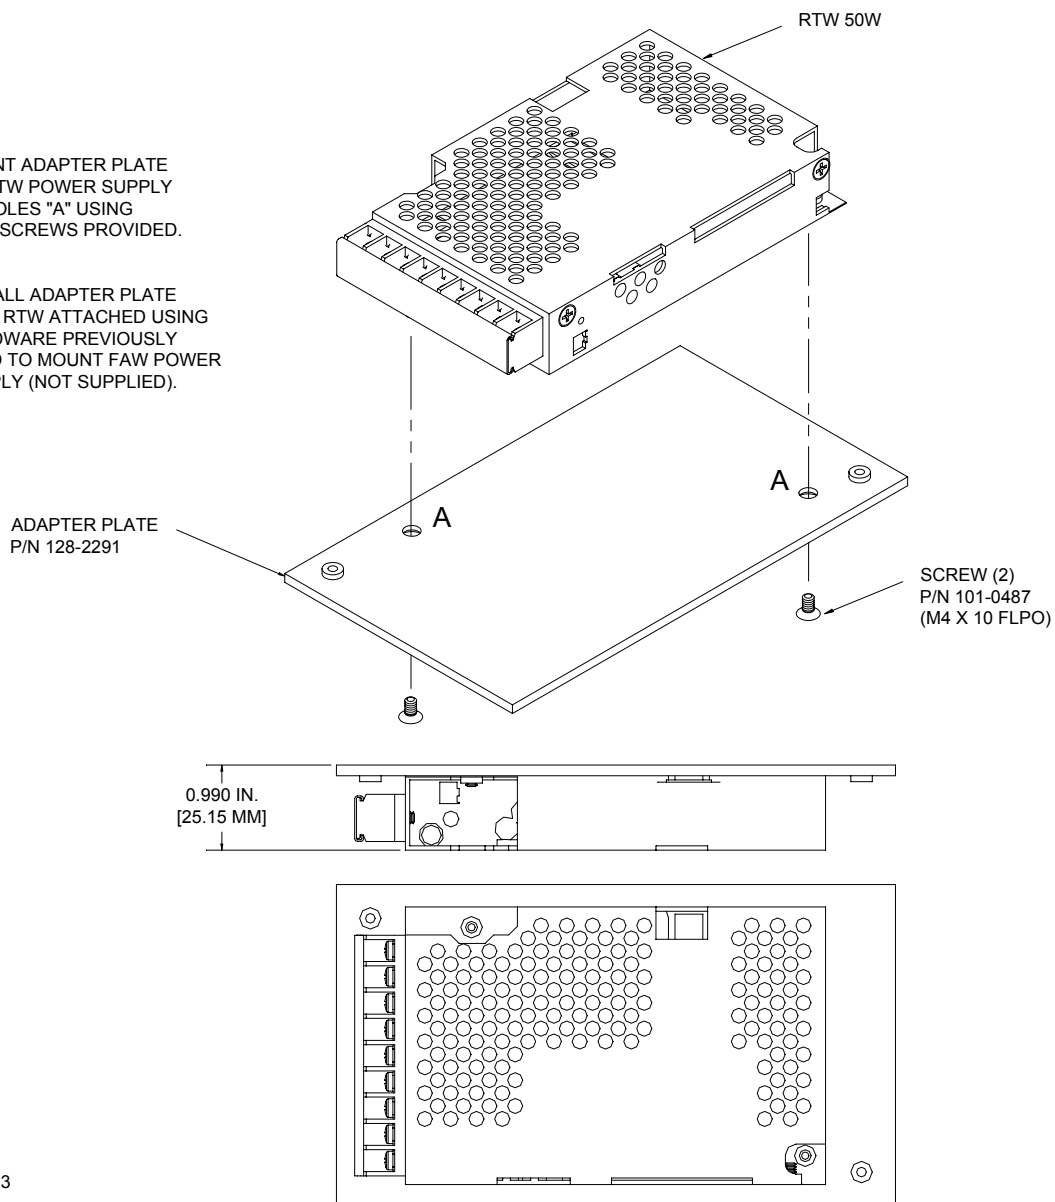

3043153

FIGURE 1. ADAPTER PLATE INSTALLATION

KEPCO, INC. ● 131-38 SANFORD AVENUE ● FLUSHING, NY. 11355 U.S.A. ● TEL (718) 461-7000 ● FAX (718) 767-1102
<http://www.kepcopower.com> ● email: hq@kepcopower.com