


INSTRUCTION SHEET

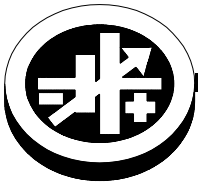

KEPCO An ISO 9001 Company.


**MA
RKW/RTW
-50V**

MOUNTING ADAPTER MA RKW/RTW-50V

DESCRIPTION. The Model MA RKW/RTW-50V includes an adapter plate and mounting screws that allow a vertically-mounted 50W RTW power supply to be easily substituted for a vertically-mounted 50W RKW power supply. Note that some RTW dimensions may exceed corresponding RKW dimensions; verify proper fit prior to installation. Mount the adapter plate to the RTW power supply using the screws and spacers provided (see Figure 1), then install the adapter plate in place of the RKW power supply using the screws previously used to mount the RKW power supply.

NOTES:

1. MOUNT ADAPTER PLATE TO RTW POWER SUPPLY AT HOLES "A" USING TWO SCREWS AND RETAINING SPACERS PROVIDED.
2. INSTALL ADAPTER PLATE WITH RTW ATTACHED USING HARDWARE PREVIOUSLY USED TO MOUNT RKW POWER SUPPLY (NOT SUPPLIED) AT HOLES "B".
3. MAX PENETRATION OF SCREWS (M3) AT HOLES "B" MUST NOT EXCEED 5MM.

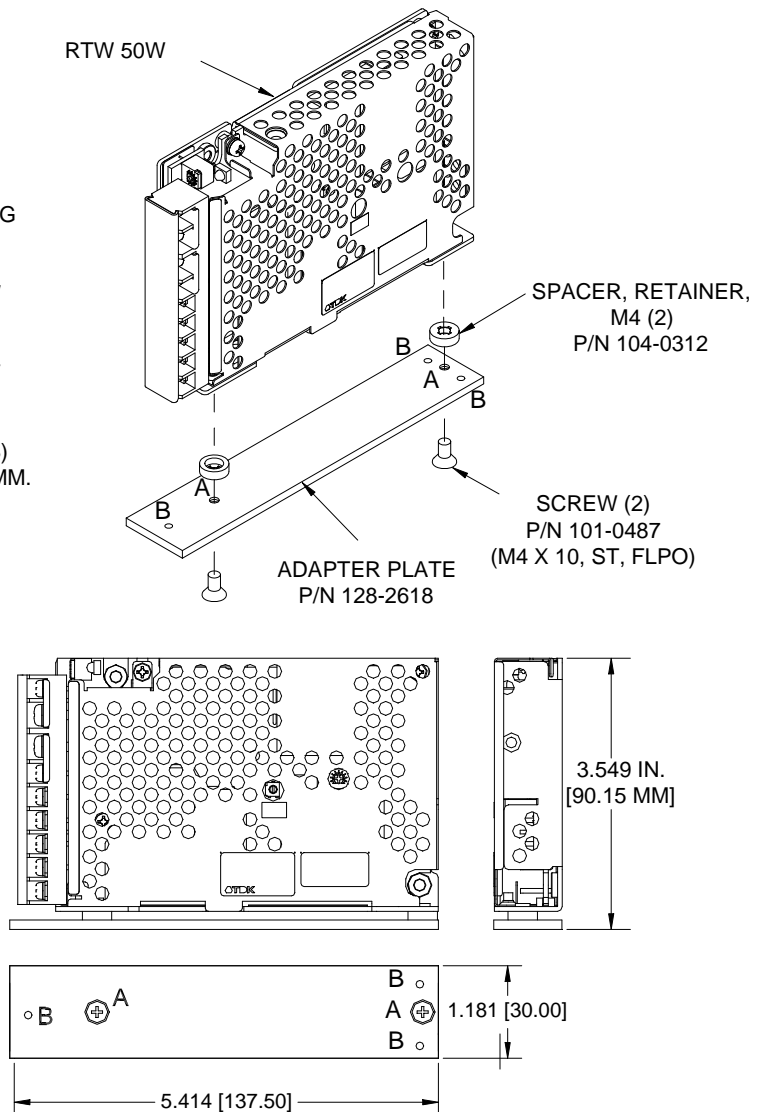

3044707

FIGURE 1. ADAPTER PLATE INSTALLATION

KEPCO, INC. ● 131-38 SANFORD AVENUE ● FLUSHING, NY. 11355 U.S.A. ● TEL (718) 461-7000 ● FAX (718) 767-1102
www.kepcopower.com ● email: hq@kepcopower.com